




## USER'S MANUAL Part 2

# Telephone with Caller ID 957

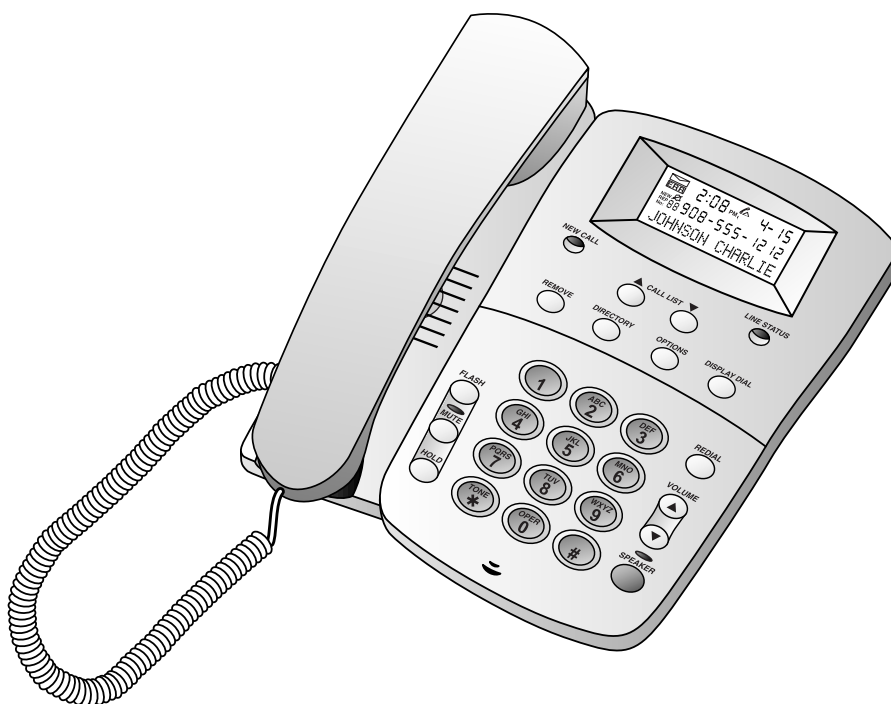

For Customer Service Or Product  
Information, Visit Our Website At  
[www.telephones.att.com](http://www.telephones.att.com)

Please also read  
**Part 1 — Important  
Product Information**

AT&T and the globe symbol are registered trademarks of AT&T Corp. licensed to Advanced American Telephones.



## CONTENTS

<b>BEFORE YOU BEGIN</b> . . . . .	3	<b>TELEPHONE DIRECTORY</b> . . . . .	14
About Caller Identification (Caller ID) . . . . .	3	Storing Directory Numbers & Names . . . . .	14
About Call History . . . . .	3	Storing a Pause or Flash in a Directory Number . . . . .	15
About Home Area Code and Local Area Codes . . . . .	3	Storing Call History Numbers in Directory . . . . .	15
<b>INSTALLATION</b> . . . . .	4	Viewing Directory Numbers . .	15
Table/Desk Installation . . . . .	4	Dialing Directory Numbers . .	15
Wall Installation . . . . .	6	Deleting Directory Numbers . .	15
<b>FEATURE SETTINGS</b> . . . . .	8	<b>CALLER ID OPERATION</b> . . . . .	16
Language Selection . . . . .	8	Message Waiting and NEW CALL Light . . . . .	16
Set Home Area Code . . . . .	8	Removing Call Records . . . . .	16
Set Local Area Codes . . . . .	9	Call Display . . . . .	17
Set Contrast . . . . .	9	Reviewing Call History . . . . .	17
Set Time/Date . . . . .	9	Display Dial . . . . .	17
Set Remaining Features . . . . .	10	Display Dial Options . . . . .	17
Feature Summary . . . . .	10	Setting Display Screen Options .	18
<b>TELEPHONE OPERATION</b> . . . . .	12	Display Screen Messages . . . . .	18
Flash/Call Waiting . . . . .	12	<b>IN CASE OF DIFFICULTY</b> . . . . .	19
Mute . . . . .	12		
Hold . . . . .	12		
Ringer Volume . . . . .	13		
Redial . . . . .	13		
Adjust Handset or Speaker Volume . . . . .	13		
Using the Speakerphone . . . . .	13		
Temporary Tone Dialing . . . . .	13		

## BEFORE YOU BEGIN

### About Caller Identification (Caller ID)

This product has a Caller ID with Call Waiting feature that works with service from your local phone service provider.

Caller ID with Call Waiting lets you see who's calling before you answer the phone, even when you're on another call.

You may need to change your phone service to use this feature. Contact your phone service provider if:

- You have both Caller ID and Call Waiting, but as separate services (you may need combined service)
- You have only Caller ID service, or only Call Waiting service
- You don't subscribe to any Caller ID or Call Waiting services.

You can use this product with regular Caller ID service, and you can use this product's other features without subscribing to either Caller ID or combined Caller ID with Call Waiting service.

There are fees for Caller ID services, and they may not be available in all areas.

This product can provide information only if both you and the caller are in areas offering Caller ID service, and if both telephone companies use compatible equipment.

### About Call History

This phone assigns each incoming call a number from 1 to 99. The most recent call will have the highest number. When the memory is full, the oldest call information is deleted to make room for new incoming call information.

If you answer a call before call information appears on the screen, it will not be in the call history.


### About Home Area Code and Local Area Codes

Always program your home area code, and, if you need them, up to four local area codes (see "Set Home Area Code" and "Set Local Area Codes" on pages 8 and 9). Programming these area codes will change how numbers are displayed in the call history, and will allow for correct operation of the Display Dial feature.

# INSTALLATION


## Table/Desk Installation

- 1 **(Optional)** You can adjust how much the phone tilts by pushing outward with your thumbs on the recessed “feet.” Push the feet out from the inside of the base, until they snap into place. If a foot comes out, align the arrow on the foot with the arrow on the base, and squeeze the foot back in from the inside of the base.

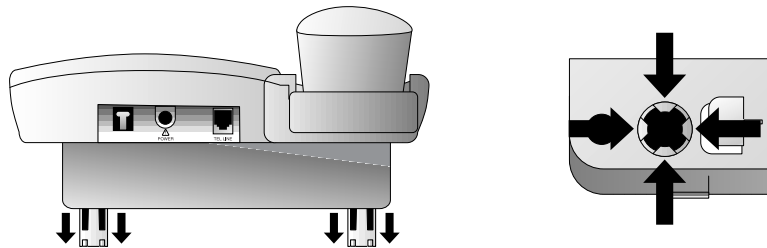


- 2 **Set the dial mode.**

This phone comes set for touch tone dialing (TT). If you have dial pulse (rotary) service, set the switch on the underside of the phone to DP.

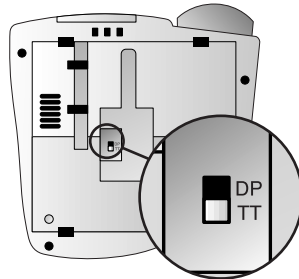

- 3 **Attach the base to the telephone.**

Turn the base so that the smaller end is toward the bottom of the telephone, then attach.

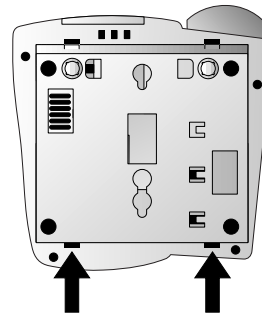


- 4 **Connect the line cord to the telephone.**
- 5 **Thread the power cord through the strain-relief tab, then plug it into the jack labeled POWER.**  
(Make sure the plug is vertically oriented.)



Use only the power cord supplied with this product.  
If you need a replacement, call 1 800 222-3111.

## INSTALLATION

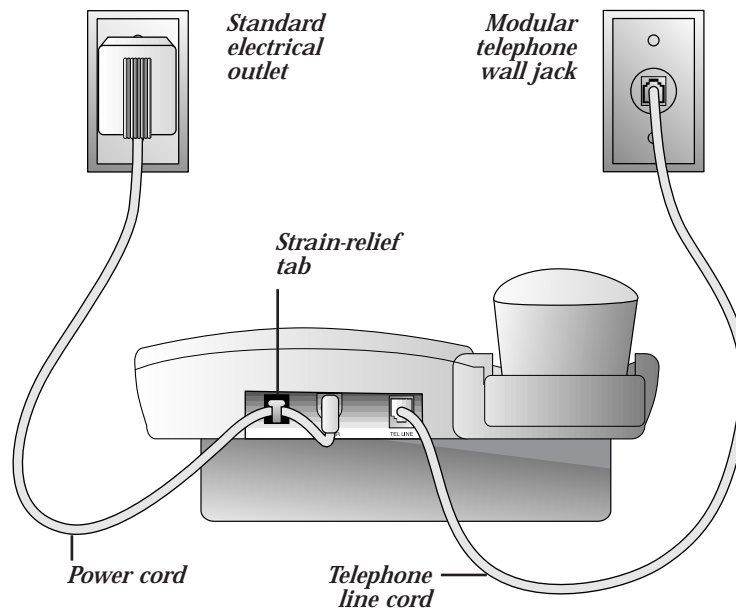

- 6 Connect the line cord to a modular jack.**
- 7 Connect the power cord to a standard electrical outlet not controlled by a wall switch.**  
*NOTE: When you first plug in the power cord, the screen displays WHICH LANGUAGE?. Follow the programming steps on page 8 after installation is complete.*
- 8 Connect the handset to the telephone.**  
 Plug the coiled cord into the handset jack on the side of the phone. Plug the other end of the coiled cord into the handset, then hang up.
- 9 Check for dial tone.**  
 Lift the handset and listen for a dial tone. If you cannot hear a dial tone, press VOLUME . If you still do not hear a dial tone, see the IN CASE OF DIFFICULTY section of this manual.

Your phone will work immediately after installation using the default feature settings (see “Feature Summary” on page 10).

*NOTE: If you subscribe to Caller ID services from your local telephone service provider, you must follow the instructions in “Set Home Area Code” for your phone to properly recognize and dial calls (see page 8). You may also need to “Set Local Area Codes” (see page 9).*

# INSTALLATION


## Wall Installation

### 1 Set the dial mode.

This phone comes set for tone dialing. If you have pulse dialing service, you cannot dial numbers with the phone set to tone. Set the switch on the underside of the base to TT (touch tone) or DP (dial pulse/rotary), depending on your service.



### 2 Connect the line cord to the telephone

Plug the short line cord into the jack labeled **TEL LINE**, then thread it through the channel on the bottom of the set.

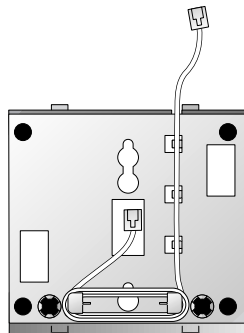

### 3 Attach the base to the telephone.


Make sure the pull-out feet are not extended. Turn the base so that the larger end is toward the bottom of the telephone. Attach the base by inserting the tabs into the slots. Push down on the large end of the base so the tabs are in the slots, and the base locks in place. Pull the loose end of the line cord through the rectangular opening on the bottom of the base.

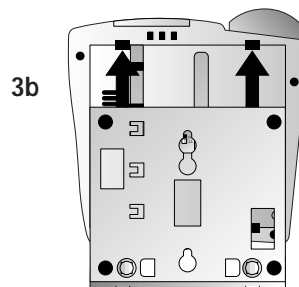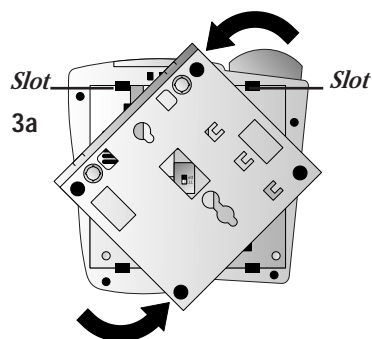

## INSTALLATION

### 4 Reverse the handset tab.

This tab holds the handset when you hang up. Hold down the switchhook, and slide the tab up and out of its slot. Turn the tab so that the end with the “hook” is up. Then insert the tab back into its slot.

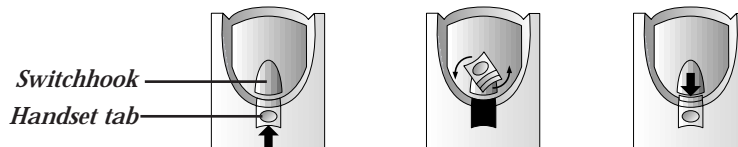

### 5 Plug the power cord into the jack labeled POWER.


(Make sure the plug is vertically oriented.)



Use only the power cord supplied with this product.  
If you need a replacement, call 1 800 222-3111.

### 6 Connect the line cord to a modular wall jack and mount the phone on the wall jack.

Make sure the cord snaps firmly into place. Place the phone on the wall jack mounting studs and pull down until it is held securely.

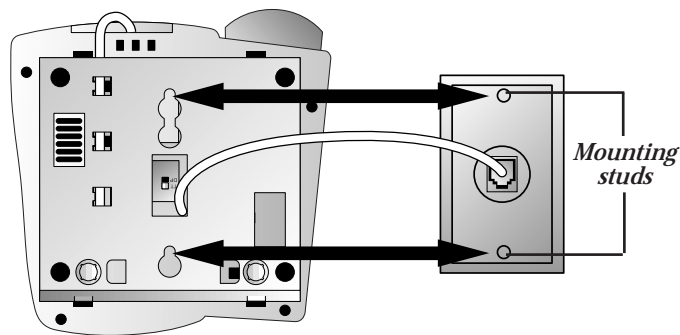

### 7 Follow Steps 7–9 in “Table/Desk Installation.”




## FEATURE SETTINGS

**NOTE:** You can exit feature setup at any time by holding **OPTIONS** for about two seconds, or by lifting the handset when there is no incoming call. The order features appear in the menu changes after initial setup. For complete feature setup, see pages 10 and 11.

### Language Selection





You can select **ENGLISH** or **ESPAÑOL** (Spanish) as the language in which your Caller ID information is displayed. When you first plug in the power cord, the screen displays:

WHICH LANGUAGE?

- 1 Press **CALL LIST**  until the screen displays your language selection.
- 2 Press **OPTIONS**. You will see the Home Area Code setup screen.

### Set Home Area Code

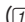You must program your area code, so your phone can properly recognize and dial calls.

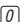If for calls within your area code	You dial	Enter in Step 2
	7 digits (phone number, no area code)	Your home area code
	10 digits (area code + phone number) — OR — 11 digits (  + area code + phone number)	  

- 1 Press **OPTIONS** until the screen displays:

HAC-\_\_\_\_\_  
HOME AREA CODE?

- 2 Use the keypad to enter the three digits of your home area code.
- 3 Press **OPTIONS**.

## FEATURE SETTINGS

### Set Local Area Codes

You can program up to four local area codes.

If for	You dial	Enter in Step 2
All calls outside your area code	11 digits ( <b>1</b> ) + area code + phone number)	No local area codes
Some calls outside your area code	10 digits (area code + phone number)	Area codes that do not require a "1"
If you dial 10 digits (area code plus phone number) for calls within your own area code, include your area code as a local area code.		

- 1 Press and release **OPTIONS** until the screen displays:

LAC1-\_\_\_\_  
LOCL AREA CODE?

- 2 Use the keypad to enter the three digits of the first local area code. The screen prompts you for the next local area code (LAC2-, LAC3-, LAC4-).
- 3 Press **OPTIONS** when you are finished.

### Set Contrast

Adjust screen lighting to a comfortable level, from 1 (light) to 4 (dark).

- 1 Press and release **OPTIONS** until the screen displays SET CONTRAST.
- 2 Press CALL LIST **▲** or CALL LIST **▼** until the screen displays the contrast level you prefer.
- 3 Press **OPTIONS**.

### Set Time/Date



**NOTE:** The time/date are automatically reset each time new call information is received. Incorrect time/date will be corrected with next incoming call.

- 1 Press and release **OPTIONS**. The screen displays ENTER TIME?.
- 2 Use the numbers on the keypad to enter the time. Press **▲** to select AM; press **▼** to select PM (the screen may not display PM until you have finished setting the time).
- 3 Use the numbers on the keypad to enter the date. For example, press **0 6 0 5** to enter June 5. (Zeroes are not displayed.)
- 4 Press **OPTIONS** to move to the next feature  
— **OR** —  
Wait 30 seconds for the phone to return to standby.

# FEATURE SETTINGS

## Set Remaining Features

You can customize how the features of this product work.

- 1 Press and release **OPTIONS** until the screen displays the feature you want to set.
- 2 Press **CALL LIST**  or **CALL LIST**  until the screen displays your selected setting. Refer to the “Feature Summary” for a full description of the features and your choices.
- 3 Press **OPTIONS**.

This saves your selection and automatically moves you to the next option. The phone returns to standby unless you make a selection within 30 seconds. When you finish setting options, wait 30 seconds for the phone to return to standby.

**NOTE:** *If you subscribe to telephone company Message Waiting service (sometimes called voice mail), you must turn the VMW feature on each time you change any feature setting. This feature is automatically turned off each time you press **OPTIONS** to enter feature setup.*

## Feature Summary

Default settings indicated by \*.

Feature/Options:	Choice:
ENTER TIME	Set the time and date.
SET VMW OFF/ON	Set for whether you subscribe to telephone company Message Waiting service.
OFF *	You do not subscribe.
ON	You do subscribe.
VMW RESET	Turn Stutter Detect ON. (It turns off with FSK reception.)
YES *	
NO	
VMW LOCK	Check with your phone service provider for more information about signal requirements.
NO *	System turns off Stutter Detect for message waiting.
YES	System receives both Stutter Detect and FSK signals.

## FEATURE SETTINGS

Feature/Options:	Choice:
<b>CALL HISTORY</b>	Choose which incoming calls are displayed.
ALL CALLS *	The screen displays all calls received.
NO CALLS	The screen displays no call history.
UNANS. CALLS	The screen displays only those calls you (or an answering system) did not answer.
<b>REPEATED CALLS</b>	Choose how calls from the same number are displayed.
COMBINED *	The display shows the most recent call from this number, and REP is displayed.
SEPARATE	Each call from this number is listed separately.
<b>CALL LIST ORDER</b>	Choose in what order calls are displayed.
BY TIME *	Reverse order. Last call received is displayed first.
NEW CALLS FIRST	Unreviewed calls are displayed first, then calls by time.
<b>CALL WAITING</b>	Set for the type of service to which you subscribe.
ON *	For Type II service (screen displays information about call waiting calls).
OFF	For Type I service (screen does not display information about call waiting calls). Also choose this setting if you do not subscribe to any Caller ID services or if you have data equipment connected in series with the phone.
<b>SET CONTRAST</b>	Adjust screen lighting to a comfortable level, from 1 (light) to 4 (dark).
1 2 * 3 4	
<b>WHICH LANGUAGE</b>	Choose whether the display appears in English or Spanish.
ENGLISH *	
ESPAÑOL	
<b>SET HOME AREA CODE</b>	Set phone to recognize calls from your area code.
HOME AREA CODE?	
<b>SET LOCAL AREA CODES</b>	Program up to four area codes that do not require dialing a "1" before them.
LOCL AREA CODE?	
LAC1...4	
<b>VMW LIGHT RESET</b>	Reset the NEW CALL light to off if it flashes after you have reviewed all voice mail messages.
LIGHT ON	
LIGHT OFF *	

## TELEPHONE OPERATION

### Flash/Call Waiting


Press to connect to the new call when you receive a call waiting signal. Press again to return to original call. Also use to access other phone company subscriber services.

### Mute


Press to prevent the other person from hearing you (you will still be able to hear the other person). The MUTE light turns on. To return to two-way conversation, press **MUTE** again.

### Hold

Press to put a call on hold. To return to the call, press **HOLD** again, press **SPEAKER**, or lift the handset.

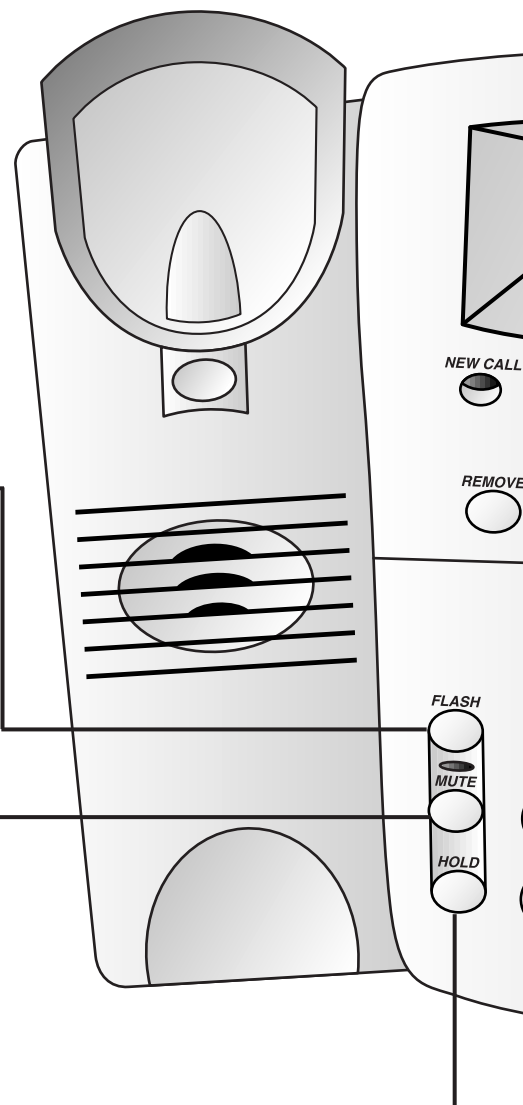

# TELEPHONE OPERATION

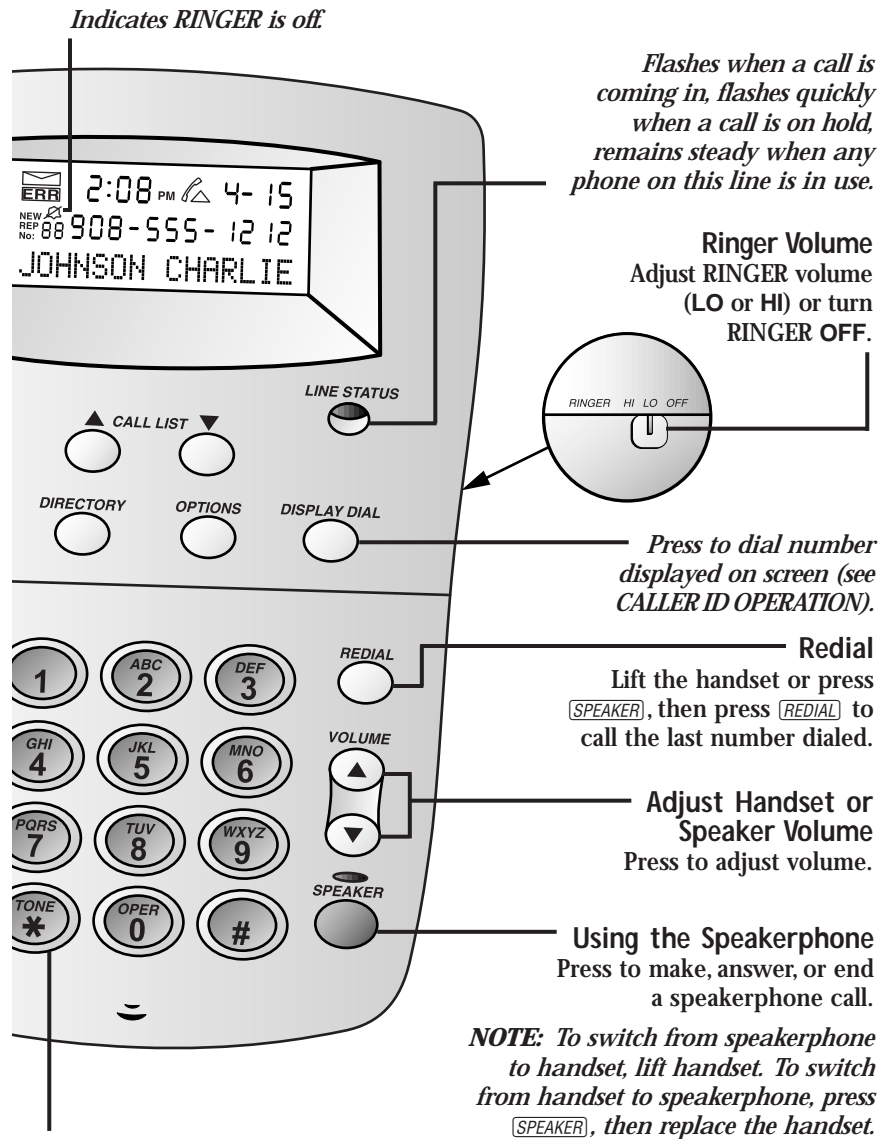


## Temporary Tone Dialing

If you have dial pulse (rotary) service, you can change from dial pulse to touch tone dialing during a call by pressing **[\*]**. This is useful if you need to send touch tone signals for access to telephone banking or long distance services.

- 1 Dial the number.
- 2 Press **[\*]**. Buttons pressed after this send touch tone signals.
- 3 After you hang up, the phone automatically returns to dial pulse service.

# TELEPHONE DIRECTORY



This telephone can store up to 50 telephone numbers (and names) that you can dial just by pressing **DIRECTORY**, a directory location, and **DISPLAY DIAL**. When entering a number or name, you can use **CALL LIST**  to backspace.





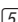






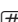
## Storing Directory Numbers & Names

If you choose to store a name with a telephone number in the directory, you must then store names with all directory entries.

- 1 Press **DIRECTORY**, then **OPTIONS**.

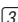ENTER NUMBER

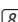- 2 Dial the telephone number you want to store (up to 24 digits)  
— **OR** —  
Press **REDIAL** to store the last number dialed.
- 3 Press **DIRECTORY**.
- 4 Use the chart below to enter a name up to 15 characters (use **CALL LIST**  to backspace and **CALL LIST**  to advance or add a space); then press **DIRECTORY** to store the name and number.

Dial Key	Presses				
	1	2	3	4	5
	1				
	A	B	C	2	
	D	E	F	3	
	G	H	I	4	
	J	K	L	5	
	M	N	O	6	
	P	Q	R	S	7
	T	U	V	8	
	W	X	Y	Z	9
	*				
	0				
	#				

**NOTE:** Entries cannot be edited after screen displays **STORED**.

# TELEPHONE DIRECTORY

## Storing a Pause or Flash in a Directory Number

Press **[F]** twice to store a pause in the dialing sequence (the screen displays F).  
Press **[FLASH]** to store a press of the flash button (the screen displays F).

## Storing Call History Numbers in Directory

- 1 Press CALL LIST **[▲]** or CALL LIST **[▼]** to scroll through the call history.
- 2 Press **[DIRECTORY]** to store displayed call information in the telephone directory. The screen displays STORED.
- 3 Press **[DIRECTORY]** to exit.

## Viewing Directory Numbers

- 1 Press **[DIRECTORY]**.
- 2 Press CALL LIST **[▲]** or CALL LIST **[▼]** to scroll through an alphabetical list of numbers/names stored in the telephone directory  
— **OR** —  
use the keypad and the chart on page 14 to enter the first character of the name you want to view, then press CALL LIST **[▲]** if needed to move to the desired name.
- 3 Press **[DIRECTORY]** to exit.

## Dialing Directory Numbers

- 1 Follow directions above to view a directory number.
- 2 Press **[DISPLAY DIAL]** to make the call. The speakerphone is activated.
- 3 Lift the handset to switch from speakerphone to handset.

## Deleting Directory Numbers

- 1 Follow directions above to view a directory number.
- 2 Press **[REMOVE]**. The screen displays:

CALL REMOVE?

- 3 Press **[REMOVE]** again to confirm. The screen displays:

DELETED





## CALLER ID OPERATION

### Message Waiting and NEW CALL Light



Stays on when you have received call information but have not yet reviewed it. If you subscribe to a voice mail service, light flashes when you have unretrieved messages waiting.

### Removing Call Records


#### Removing a Specific Record

- 1 Press CALL LIST  or CALL LIST  to display call record you want to remove.
- 2 Press and release **REMOVE**. Screen displays REMOVE CALL?.
- 3 Press **REMOVE** again.


#### Removing All Calls

- 1 Press CALL LIST  or CALL LIST  to enter Call History.
- 2 Press and hold **REMOVE** for about two seconds. Screen displays REMOVE ALL?.
- 3 Press and hold **REMOVE** for about two seconds to remove all calls.

**NOTE:** Once a call is removed from Call History, it cannot be retrieved.

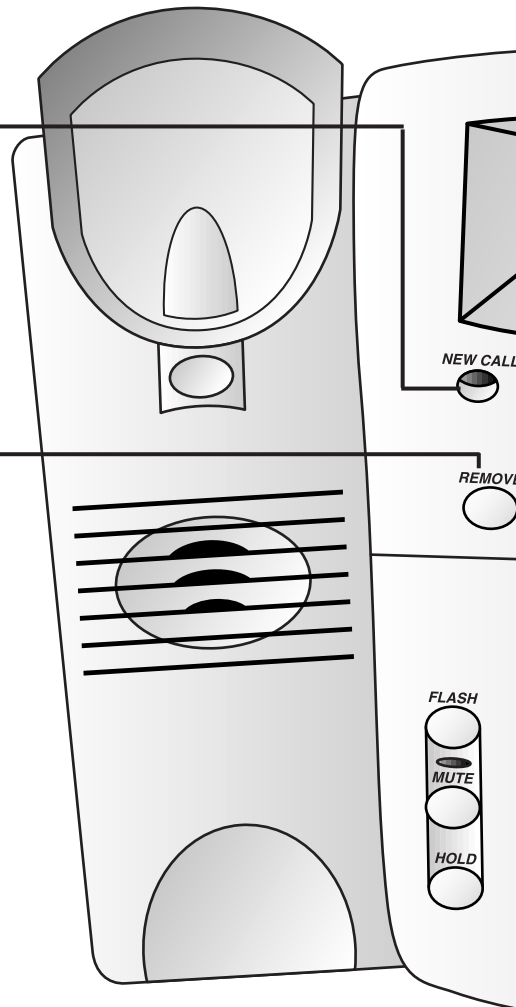

## CALLER ID OPERATION

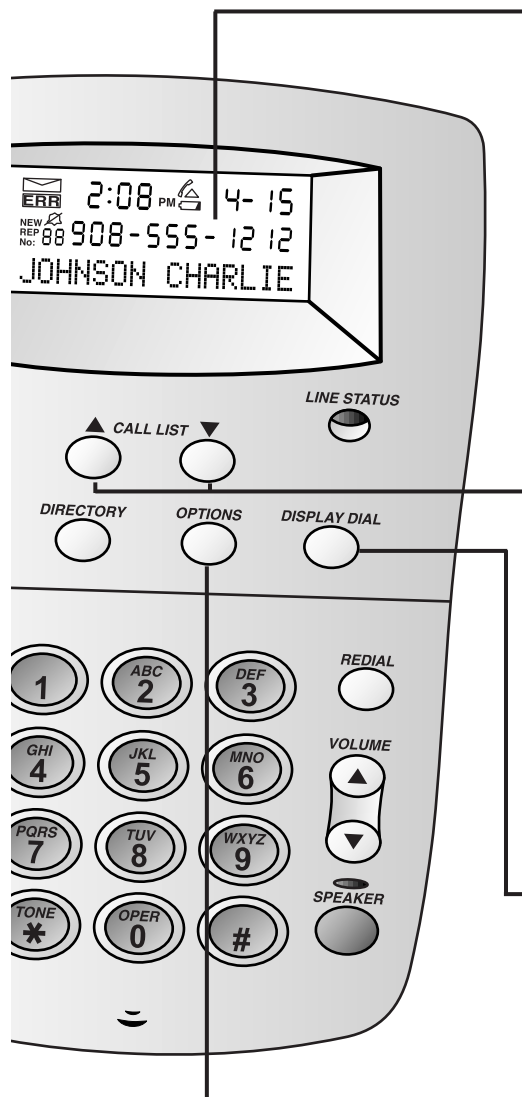

### Call Display

Between the first and second rings, screen displays:

- Caller's name (15 letters are sent by your phone company)
- Caller's area code and telephone number (area code not displayed if programmed as Home Area Code)
- Time and date of the call
- Call's position in call history.

Call information is displayed for about 30 seconds.

### Reviewing Call History

To review earlier calls, press CALL LIST ▾.

To advance through call history from an earlier call, press CALL LIST ▴. When you reach the end of call history, the screen displays END OF LIST, then begins again.


### Display Dial

- Press to call the displayed number.
- The screen shows the number being called, the speakerphone is activated, and the call is dialed.
- If the screen displays ERROR PRESENT or NO NUMBER, the present number cannot be dialed.
- You cannot use this feature to dial PRIVATE calls.

### Display Dial Options

While number is displayed, press to scroll through choices for dialing (without area code, with area code, with 1 plus area code).

## CALLER ID OPERATION

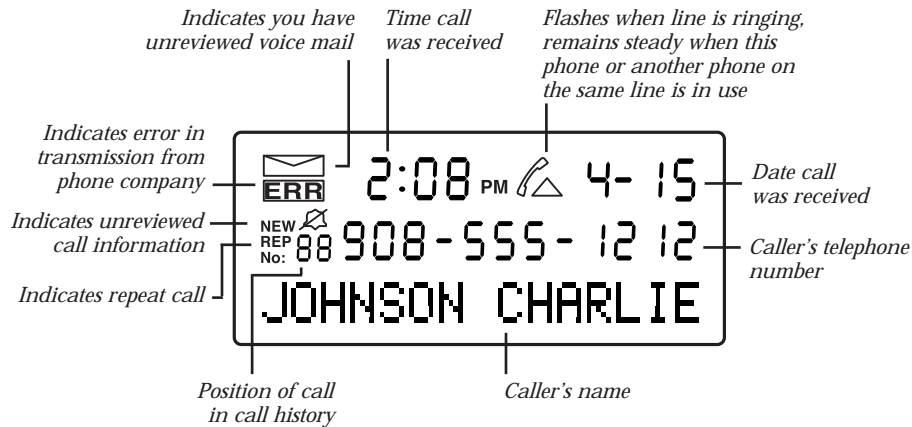

### Setting Display Screen Options

You can customize how the Caller ID features of this product work.

See "Set Remaining Features" on page 10 for instructions. For options, see Call History, Repeated Calls, and Call List Order in the "Feature Summary" on pages 10 and 11.

### Display Screen Messages

Screen Displays:	When:
PRIVATE NAME	The other party is blocking name information.
PPP	The other party is blocking number information.
PRIVATE CALLER	The other party is blocking name and number information.
UNKNOWN NAME	Your phone company is unable to receive information about this caller's name.
UUU	Your phone company is unable to receive information about this caller's number.
UNKNOWN CALLER	Your phone company is unable to receive information about this caller's name and number.
EXTENSION USED	An extension phone on this line is being used, so call information cannot be received.

## IN CASE OF DIFFICULTY

If you have difficulty operating this phone, try the suggestions below. For Customer Service, visit our website at [www.telephones.att.com](http://www.telephones.att.com) or call 1 800 222-3111. **Please retain your receipt as your proof of purchase.**

### No Dial Tone

- Make sure all plugs are connected properly. Inspect the line cord connections at the modular jack and at the telephone. Also inspect the coiled handset cord connections at both ends.
- Unplug the telephone and connect it to another modular jack. If it still does not work, and other telephones in your home are working, the problem is with this telephone.

### Call Cannot Be Dialed or Is Dialed Slowly

- Make sure you choose the correct dial mode (see FEATURE SETTINGS). If you have dial pulse service, you cannot dial numbers with the phone set to touch tone dialing.
- If you have just used the Temporary Tone feature, leave the handset on the base for a few seconds before making another call.

### Telephone Does Not Ring

- Make sure the RINGER switch is not set to OFF.
- If there are several other telephones on the same line, try disconnecting some of the other telephones. Having too many telephones connected can also create problems such as low ringer volume or impaired sound quality during calls.

### Difficulty Storing Numbers in Memory



- Make sure you are pressing the correct sequence of buttons for storing numbers.
- If you are interrupted by a recorded announcement telling you to hang up or by a loud buzzing noise, hang up and try to enter the number more quickly.
- Try calling the number you want to store in memory. When the call is ended, press **DIRECTORY**, **OPTIONS**, **REDIAL**.
- If someone lifts an extension phone while you are storing numbers in memory, programming might be interrupted. Make sure all extensions are on hook while storing numbers in memory.

## IN CASE OF DIFFICULTY

### Message Waiting/New Call Light Stays On

- Make sure you have reviewed all calls.
- Unplug the power cord for 10 seconds, then plug it back in.

### Message Waiting/NEW CALL Light Flashes

- Make sure you have reviewed all telephone company voice mail.
- Reset the voice mail waiting indicator. Press and release **OPTIONS** until the screen displays **VMW RESET**, press **CALL LIST**  or **CALL LIST**  until the screen displays **OFF**, then press **OPTIONS** and wait 30 seconds for the phone to return to standby.

### Screen is Blank

- Make sure line and power cords are correctly connected.
- You must subscribe to service from your local phone service provider to see call information on the screen (see “About Caller Identification” in **BEFORE YOU BEGIN**).

### Screen Displays **ERR**

The phone has received incomplete or corrupted caller identification information from the telephone company. The phone will display as much information as possible.

### Screen Displays **Extension Used, and None Are**

Check all line cord connections.

### No Caller ID Information While on a Call

- Make sure your service provides Caller ID information while you are on a call. This is sometimes known as “Caller ID on Call Waiting,” or “Type II Caller ID.”
- Make sure you have the Call Waiting feature on this phone set to **ON** (see “Feature Summary” in **FEATURE SETTINGS**).
- The phone cannot display the information if another phone on the same line is in use. Make sure all extensions are on hook.

### Screen Displays Wrong Date

- The date will be corrected with the next incoming call.
- You can correct the date manually by following the directions on page 9.